Sony Ericsson

User guide

R306c

This is the Internet version of the User's guide. © Print only for private use.

Congratulations on your purchase of the Sony Ericsson R306c. For additional phone content, go to *www.sonyericsson.com/fun*. Register now to get free online storage and special offers at *www.sonyericsson.com/myphone*. For product support, go to *www.sonyericsson.com/support*.

Instruction symbols

The following instruction symbols appear in this User guide:

> Use the navigation key to scroll and select.

Press the navigation key centre.

Press the navigation key up.

Press the navigation key down.

Press the navigation key to the left.

Press the navigation key to the right.

Note

Tip


Warning

Indicates that a service or function is network- or subscription-dependent. All menus or functions may not be available in your phone. Consult your network operator for more information.

This is the Internet version of the User's guide. © Print only for private use.

Preparing the phone

To insert the SIM card and battery

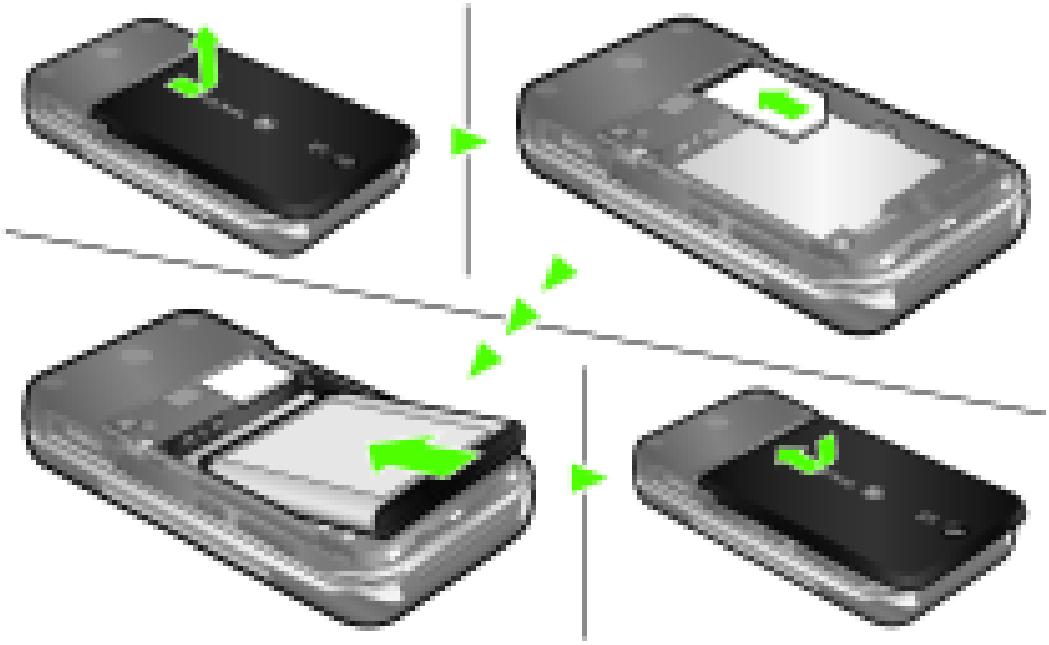

1 Remove the battery cover.
2 Slide the SIM card into its holder with the contacts facing down.
3 Insert the battery with the label side up and the connectors facing each other.
4 Replace the battery cover.

! *Do not force the battery cover into place. Slide the battery cover carefully onto the phone and close it.*

This is the Internet version of the User's guide. © Print only for private use.

Charge the battery

Your phone battery is partly charged when you buy it.

It may take 30 minutes for the battery icon to appear on the screen.

Using the USB charger

To connect the charger and charge the battery (The illustrations are for guidance only and may not accurately depict the actual phone)

1 Connect the USB cable (you can get instruction for three conditions from **Note**) plug to the AC adapter USB socket, as shown in the above illustration. The USB cable is supplied with your phone.



2 Connect the USB cable connector to your phone. Press a key to view the charging status on the screen. It takes approximately 2.5 hours to fully charge the battery.

This is the Internet version of the User's guide. © Print only for private use.


To remove the charger




1 Charge your battery until the battery icon indicates a full charge.
2 Tilt the USB charger connector upwards to remove it.

Note:

1 If there are two USB cables in the kit (USB cable for charging and USB cable for data transferring. See the illustrations as below), then the USB cable for charging **is only intended for charging your phone. Do not use it for transferring data**.
The USB cable for the USB charger is only intended for connection to the AC adapter to charge your phone. **It must not be used for connection to a PC. It can only be used for charging your phone. Never use it for charging accessories**.

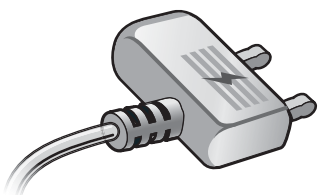

USB cable for charging

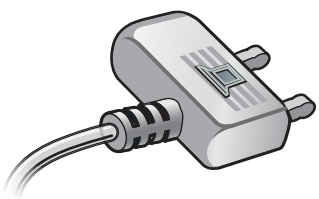

USB cable for transferring

This is the Internet version of the User's guide. © Print only for private use.

2 If there is only one USB cable in the kit, it is intended for charging your phone as well as transferring data.
3 If there is only one USB cable for the USB charger in the phone kit, this USB cable is only intended for charging your phone.
4 Sony Ericsson strongly recommends that you **use only Sony Ericsson branded original batteries, the part of power supply device in accordance with YD/T 1591-2006 specifications of Communications Industry Standards of P. R. China and the USB cable supplied with your phone to charge the phone.** The use of third-party products may decrease the performance of your phone and/or pose a risk to your health or safety.

You can charge the battery for more or less than 2.5 hours. Interrupted charging will not damage the battery.
Performance depends on temperatures, signal strenth, usage patterns, features selected and voice or data transmissions. The stand-by time for this battery is up to xxx hours.

Use only Sony Ericsson branded original batteries intended for use with your mobile phone. If you use other batteries you may not be able to charge your phone.

This is the Internet version of the User's guide. © Print only for private use.

Turning on the phone

To turn on the phone

1 Press and hold down .
2 Enter your PIN if requested. To correct mistakes, press C.
3 Select OK.
4 Select a language.
5 Enter the time and date and select Save.



To turn off the phone

- Press and hold down .


Standby

After you have turned the phone on and entered your PIN, the name of your operator appears on the screen. This is called standby. You can now make and receive calls.

This is the Internet version of the User's guide. © Print only for private use.

SIM and PIN

SIM card

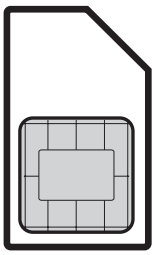

The SIM (Subscriber Identity Module) card, which you get from your network operator, contains information about your subscription. Always turn off your phone and detach the charger before you insert or remove the SIM card.

You can save contacts on the SIM card before removing it from your phone. Contacts may also be saved in the phone memory. *See Contacts on page 16.*


PIN code

You may need a PIN (Personal Identification Number) to activate the services in your phone. Your PIN is supplied by your network operator. Each PIN digit appears as *, unless it starts with emergency number digits, for example, 112 or 911. You can call an emergency number without entering a PIN.


If you enter the wrong PIN three times in a row, this message displayes, PIN blocked. To unblock, enter your PUK code provided by your network operator. *To unblock it, you need to enter your PUK (Personal Unblocking Key).*

This is the Internet version of the User's guide. © Print only for private use.

Phone overview

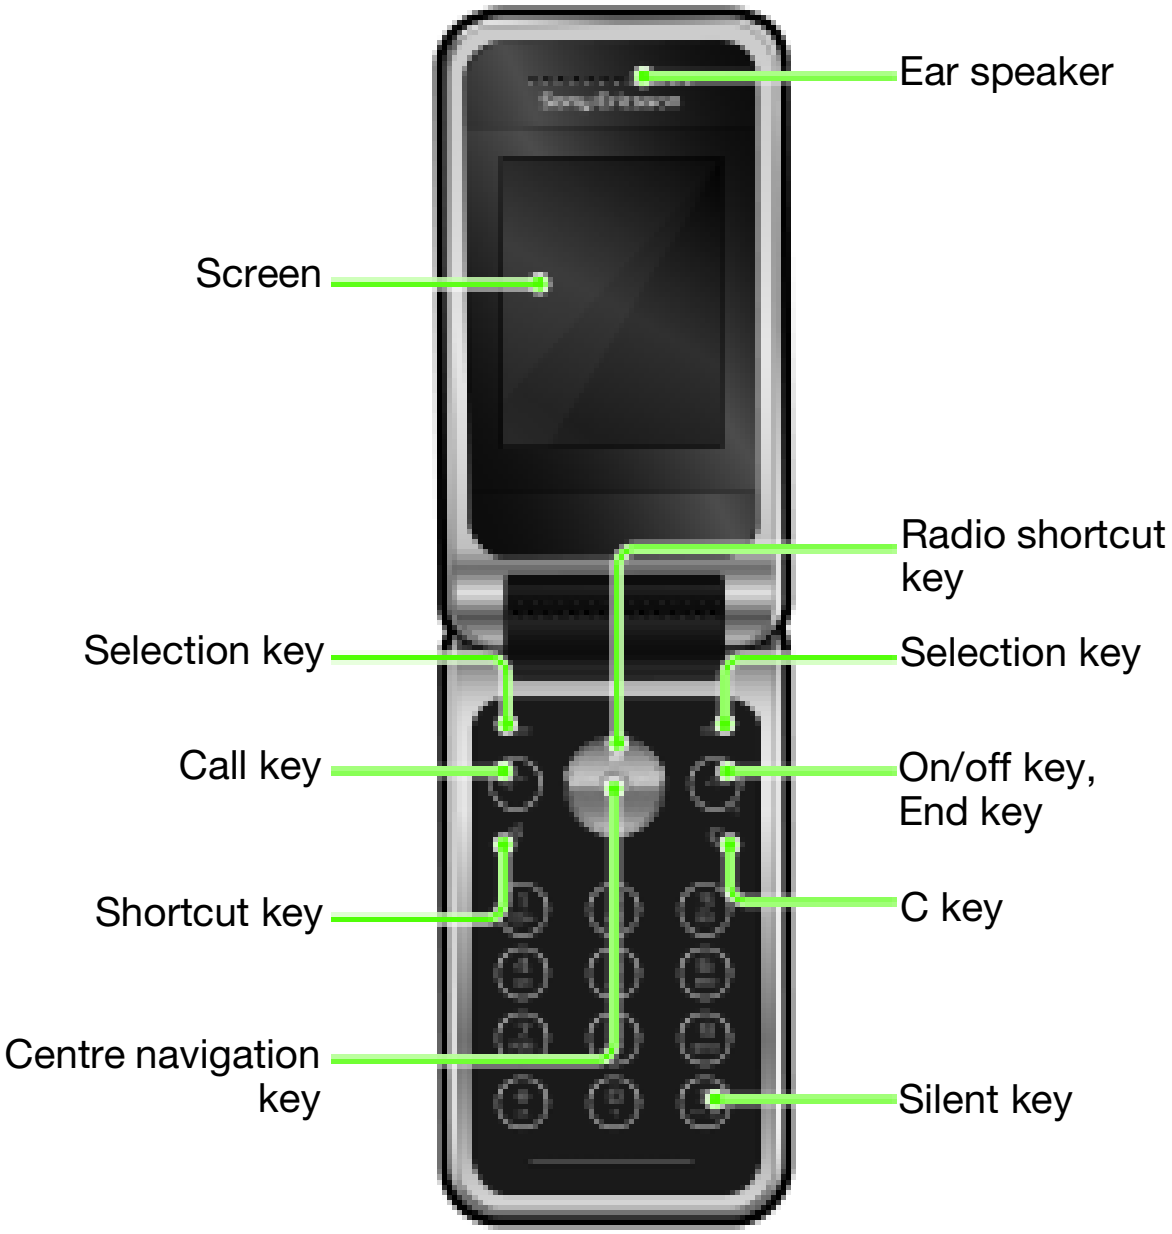

This is the Internet version of the User's guide. © Print only for private use.

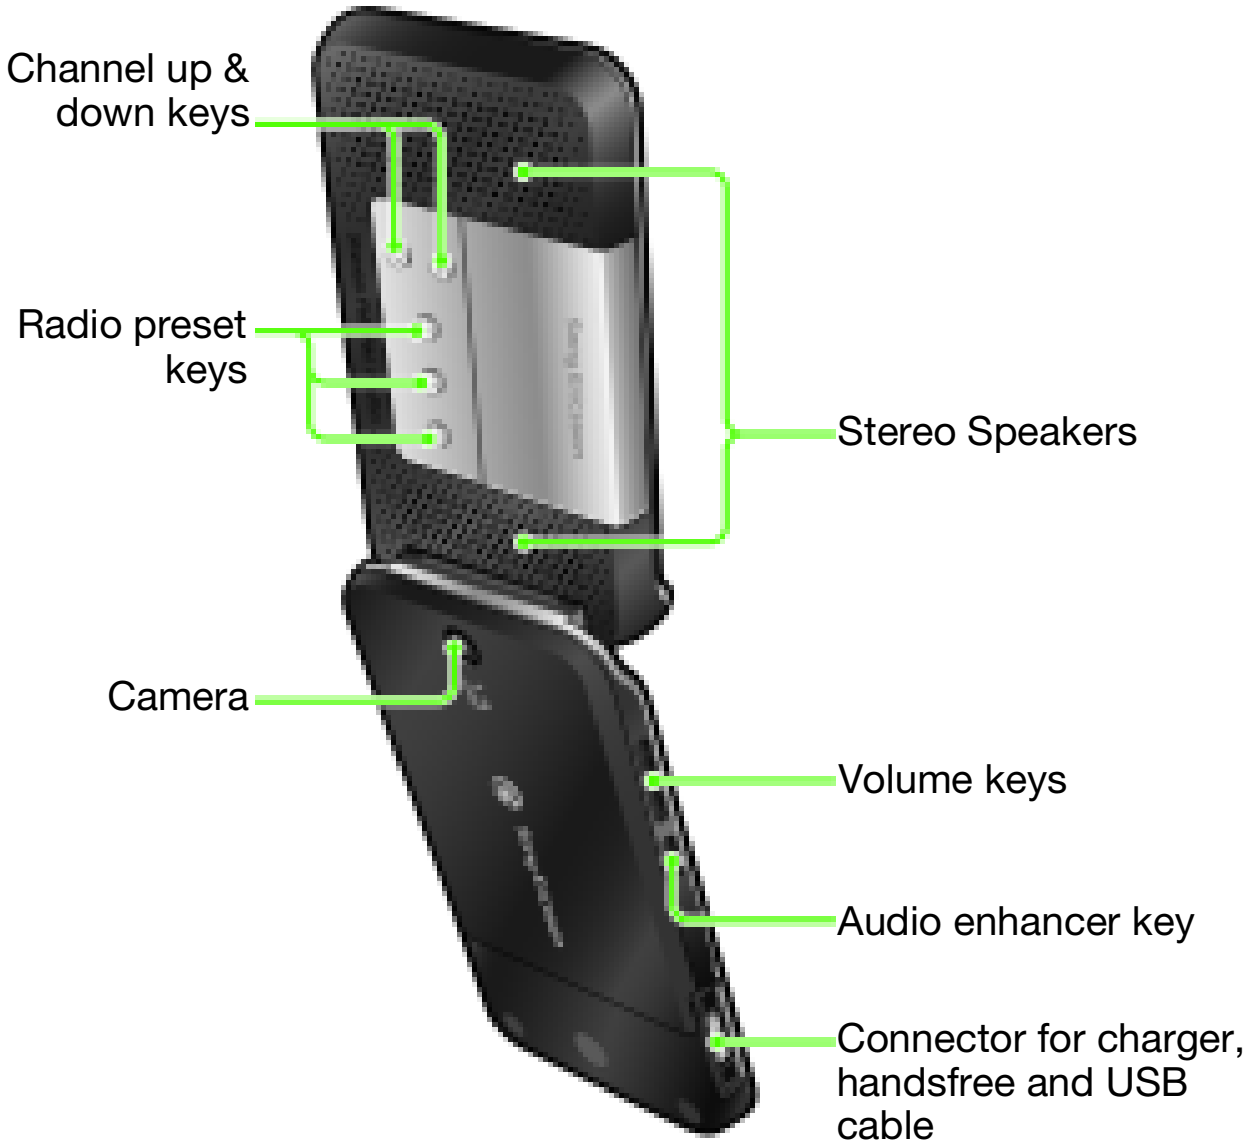

This is the Internet version of the User's guide. © Print only for private use.

Menu overview

Organizer	File manager, Alarm, Calendar, Tasks, Notes, Timer, Stopwatch, Calculator
Monternet	
Entertainment	Games, TrackID™, Record sound
Camera	
Messaging	Write new, Inbox, Drafts, Outbox, Sent messages, Saved msgs, Call voicemail, Templates, Settings
Radio	
Calls*	

All | Answered | Dialled | Missed

Contacts	Myself, New contact
Settings*	


General | Sounds & alerts | Display | Calls | Connectivity

Some menus and icons in this document may vary depending on operator, network or subscription.
** You can use the navigation key to scroll between tabs in sub menus.*

This is the Internet version of the User's guide. © Print only for private use.

Screen icons

These icons may appear on the screen.


Icon	Description
	Battery icon. A completely green icon means that the battery is fully charged
	You have missed a call
	Divert calls is activated
	The phone is set to silent
	You have received a new text message
	You have received a new picture message
	The handsfree is connected
	An alarm is activated
	Ongoing call
	The loudspeaker is on
	The radio is playing
	The Bluetooth function is activated
	Average network coverage. Five bars means the phone is receiving a full signal

This is the Internet version of the User's guide. © Print only for private use.

Shortcuts

The main menus are shown as icons. Some submenus include tabs.

To use navigation key shortcuts

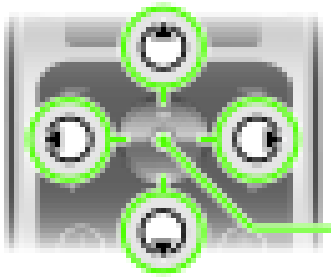

- Press to play the radio.
- Press to write a new message.
- Press to take a picture.
- Press to open Contacts.
- Press to Add, Delete, Move or use a shortcut.

To change a standby shortcut, go to Menu > Settings > General > Shortcuts.

To navigate the menus

1 From standby press to select Menu.
2 Press , , , to move through the menu.

To scroll between the tabs

- Scroll to a tab by pressing or .

To return to standby

- Press .

To delete items

- Press C.

To set the phone to silent

- From standby press and hold down #.


This is the Internet version of the User's guide. © Print only for private use.

Calling

You must turn on the phone and be within range of a network.

To make a call

1 From standby enter the area code and phone number.
2 Press .

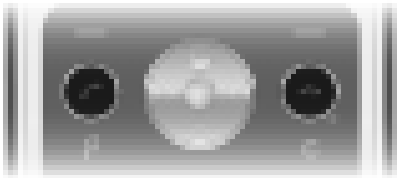

To end a call

- Press .

To answer a call

- Press .

To reject a call

- Press .

To change the ear speaker volume during a call

- On the left side of the phone, press the volume keys up or down.

To turn off the ringtone when receiving a call

- Press or volume key to turn off the ringtone without answering the call.

To turn the loudspeaker on during a call

- Press SpkrOn.

Do not hold the phone to your ear when using the loudspeaker. This could damage your hearing.

This is the Internet version of the User's guide. © Print only for private use.

To make international calls

1 From standby press and hold down 0 + until a + sign appears on the screen.
2 Enter the country/region code, area code (without the first zero) and phone number.
3 Press .

To view a missed call

- When Missed calls: is displayed, select Yes to view. To call back, scroll to the number and press .

Call list

You can view information about recent calls.

To call a number from the call list

1 From standby press .
2 Scroll to the name or number and press .

To clear the call list

1 From standby press .
2 Scroll to the All tab and select Options > Delete all.

To make an emergency call

- From standby enter 112 (the international emergency number) and press .

This is the Internet version of the User's guide. © Print only for private use.

Contacts

You can save contacts in the phone memory or on the SIM card. You can copy contacts from the phone memory to the SIM card or from the SIM card to the phone memory.



See Entering text on page 27.

To add a contact

1 From standby press ⊙.
2 Scroll to New contact and select Add.
3 Select Add to enter the name and select OK.
4 Scroll to New number: and select Add.
5 Enter the number and select OK.
6 Scroll to the type of the number and select Select.
7 Scroll between tabs and select the fields to add information.

You can enter the + sign and country/region code with all phonebook numbers. They can then be used abroad or at home. See To make international calls on page 15.

To call a phone contact

When Chinese has been selected as the phone language

To call a contact written in Chinese characters

1 Menu > Contacts. Press and hold down #⌴ to switch the search language to Chinese. Then enter the entire multi-letter name, pure initial or mixed initial pinyin of Chinese contacts you want to call.
2 When the contact is highlighted, press ◀ or ▶ to select a number and press ✆.

To call a contact written in Latin characters

1 Menu > Contacts. Press and hold down #⌴ to switch the search language to English. Then enter the first letters or all letters of the contact you want to call (a maximum of 10 letters).
2 When the contact is highlighted, press ◀ or ▶ to select a number and press ✆.

This is the Internet version of the User's guide. © Print only for private use.

When English has been selected as the phone language

To call a contact written in Chinese characters

1 Menu > Contacts. Scroll to the contact you want to call.
2 When the contact is highlighted, press ◀ or ▶ to select a number and press ✆.

To call a contact written in Latin characters

1 Menu > Contacts. Scroll to, or enter the first letters or all letters of the contact you want to call (a maximum of 10 letters).
2 When the contact is highlighted, press ◀ or ▶ to select a number and press ✆.

To edit a contact

1 From standby press ▼.
2 Scroll to the contact and select Options > Edit contact.
3 Scroll between the tabs, edit information and select Save.

To delete a contact

1 From standby press ▼.
2 Scroll to the contact and press C.

To copy all contacts to the SIM card

1 From standby press ▼.
2 Scroll to New contact and select to Options > Advanced > Copy to SIM > Copy all.

To edit or view your own phone number

1 From standby press ▼.
2 Scroll to New contact and select Options > Special numbers > My numbers.
3 Select to edit or view My mobile.
4 Select Save.

This is the Internet version of the User's guide. © Print only for private use.

Radio

Your phone has a radio and the handsfree works as an antenna.



To listen to the radio

1 Connect the handsfree to the phone.
2 From standby press .

To turn on the stereo speakers

- When the radio is playing, select Options > Turn on spkr.

Do not use your phone as a radio in places where this is prohibited.

Audio enhancer

The audio enhancer produces sound effects when playing the radio through the stereo speakers.

To use concert sound

1 When the radio is playing, press and hold .
2 To deactivate Concert sound and switch to Normal effect, press again.

To turn on the speaker

1 When the radio is playing, select Options > Turn on spkr.
2 To activate Volume boost press and hold , to switch to Concert sound press again.
3 To deactivate Volume boost and switch to Normal effect, press again.

To switch to AM

- When the radio is playing, select Options > Turn on AM.

When you listen to AM or FM radio, you must use the handsfree included in the phone kit.

This is the Internet version of the User's guide. © Print only for private use.

To change the volume

- When the radio is playing, press the volume keys on the left side of the phone up or down.

> *Adjust the volume cautiously when using volume key to avoid volume levels that could damage your hearing.*

Searching for channels

To automatically search for channels

- When the radio is playing, press ●.

To manually search for channels

- When the radio is playing, press ◀ or ▶.

To switch between preset channels

- When the radio is playing, press ▲ or ▼.

Saving channels

You can save up to 20 preset channels.

To save a radio channel to the list of channels

1. When you have found a radio channel, select Options > Channels > Save.
2. Select Insert.

To select saved channels

1. From standby press .
2. Select Options > Channels > Channel list.
3. Select a radio channel.

To save a radio channel to a radio preset key

1. When you have found a radio channel, select Options > Settings > Set radio key > Insert.
2. Select a radio channel in the list to add the channel to the list of channels.

To select a radio channel saved to a radio preset key

- Press any of the radio preset keys 1, 2 or 3.
- Press ▲ or ▼ to switch between preset radio channels.

This is the Internet version of the User's guide. © Print only for private use.

Press and hold any preset key to turn on or turn off the radio.

To turn the radio off when minimized

- From standby press and select .

To record from the radio

1. When the radio is playing, select Options > Record radio to start.
2. Select Save to save the recording.
3. The radio recording can be accessed by Options > My radio recs.

Select Options > Settings > Record quality *and select between* Normal quality *or* High quality*.*

This service is not available in all countries/regions. Where available, you may only use this service for playback at a more convenient point in time.

To play a radio clip

- From standby select Menu > Organizer > File manager > Music > My radio recs > Open.

To set the radio as alarm signal

1. From standby select Menu > Organizer > Alarm.
2. Scroll to an alarm and select Edit.
3. Scroll to the tab.
4. Scroll to the Alarm signal: > Edit.
5. Select Radio.
6. Select Save.

Keep the handsfree inserted when you select radio as alarm signal. The radio alarm signal will sound through the loudspeaker.

To minimize the radio on the screen

1. Select Options > Minimize.
2. To restore the radio on the screen, from standby press .

This is the Internet version of the User's guide. © Print only for private use.

Messaging

Text messages (SMS)



You must have a service centre number, which is supplied by your service provider and saved on the SIM card. You may have to enter the number yourself.

To set service centre number

1 From standby select Menu > Messaging > Settings > Text message > Service centre. The number is shown if it is saved on the SIM card.
2 If there is no number shown, enter the service centre number, including the international “+” sign and country/region code.
3 Select Save.

See Entering text on page 27.

To write and send a text message

1 From standby press ◀).
2 Select Text message. Write the message and select Cont.
3 Select a receipient through Enter phone no. or Contacts look-up and select Send.

To view a received text message

1 Text message received appears. Select Yes.
2 Scroll to the unread message and select View.

This is the Internet version of the User's guide. © Print only for private use.

Picture messages (MMS)



Picture messages can contain text, pictures, sound recordings and attachments.

You must set an MMS profile and the address of your message server. If no MMS profile or message server exists, you can receive all the settings automatically from your network operator or at www.sonyericsson.com/support.

To create and send a picture message

1 From standby press .
2 Select Picture msg.
3 Enter text. To add items to the message, press , scroll , and select an item.
4 Enter text. To add items to the message, press Cont.
5 Select an receipient (Enter email addr. Enter phone no. Contacts look-up) and selet Send.

Sending and receiving phones must have subscriptions that support picture messaging.

This is the Internet version of the User's guide. © Print only for private use.

Camera

You can take pictures and record video clip to view and save. You can send pictures taken with the camera. They are saved in Menu > Organizer > File manager > Camera album. The format is JPEG.

Pictures downloaded using picture messages, Internet or Bluetooth™ wireless technology are saved in Pictures.

To start the camera and take a picture

1 From standby press .
2 Scroll to .
3 Select TakePic to take a picture.
4 The picture is automatically saved in Camera album.

Zoom is only possible in VGA mode.

To delete a saved picture

1 From standby select Menu > Organizer > File manager > Camera album.
2 Scroll to a picture and press C.

To send a saved camera picture as picture message

1 From standby select Menu > Organizer > File manager > Camera album.
2 Scroll to a picture and select Options > Send > As picture msg.
3 Select Cont.
4 Select a recipient through Enter email addr., Enter phone no. or Contacts look-up and select Send.

See To send a camera picture using Bluetooth on page 27.

To record a video clip

1 From standby press and scroll to .
2 Press Record to start recording.

To stop recording

- Press Stop to automatically save the video clip.

To view video clips

1 From standby select Menu > Organizer > File manager > Videos.
2 Select a video clip to Play.

This is the Internet version of the User's guide. © Print only for private use.

More functions

TrackID™

TrackID™ is a free music recognition service. Search for song titles, artists and album names. You must have the required settings in your phone. See *Internet* on page 24.

For cost information contact your service provider.

To search for song information

- When you hear a song through a loudspeaker, from standby select Menu > Entertainment > TrackID™.

To record a sound

- From standby select Menu > Entertainment > Record sound.

To listen to a recording

1. From standby select Menu > Organizer > File manager.
2. Scroll to Music and select Open.
3. Scroll to a recording and select Play.

Internet

You need the correct settings in your phone. If settings are not in your phone, you can:

- Get them in a text message (SMS) from the network operator.
- On a computer, go to *www.sonyericsson.com/support* and request a text message with the settings.

To select an Internet profile

- From standby select Menu > Settings > the Connectivity tab > Internet settings > Connect using:. Select a profile.

To start browsing

1. From standby select Menu > Monternet.
2. Select Options > Go to.
3. Select an option.

This is the Internet version of the User's guide. © Print only for private use.

File manager

You can use the file manager to handle files saved in the phone memory.

To view information about files

1 From standby select Menu > Organizer > File manager.
2 Find a file and select Options > Information.

To move a file in the file manager

1 From standby select Menu > Organizer > File manager.
2 Find a file and select Options > Manage files > Move.
3 Select an option.

To delete a file from the file manager

1 From standby select Menu > Organizer > File manager.
2 Find the file and press C.

To view a memory status of folders

- From standby select Menu > Organizer > File manager > Options > Memory status.

This is the Internet version of the User's guide. © Print only for private use.

Bluetooth™ wireless technology

Bluetooth™ wireless technology makes wireless connections to other Bluetooth devices, for example, a Bluetooth headset, possible. You can:

- Connect to several devices at the same time.
- Exchange items.

The recommended maximum distance between two Bluetooth devices is 10 metres (33 feet), with no solid objects in between.

To turn the Bluetooth function on

- From standby select Menu > Settings > the Connectivity tab > Bluetooth > Turn on.

Please check if local laws or regulations restrict the use of Bluetooth wireless technology. If it is not allowed, you must ensure that the Bluetooth function is turned off.

To show or hide your phone

- From standby select Menu > Settings > the Connectivity tab > Bluetooth > Visibility > Show phone or Hide phone.

If set to hide, other devices will not be able to identify your phone using Bluetooth wireless technology.

To pair a device with your phone

1. From standby select Menu > Settings > the Connectivity tab > Bluetooth > My devices > New device to search for available devices.
2. Select a device from the list. Enter a passcode, if required.

This is the Internet version of the User's guide. © Print only for private use.

To pair your phone with a Bluetooth handsfree

1 From standby select Menu > Settings > the Connectivity tab > Bluetooth > Handsfree.
2 Select Yes if you are adding a Bluetooth handsfree for the first time or select Handsfree > My handsfree > New handsfree if you are pairing with another Bluetooth handsfree. Make sure that your handsfree is ready to be paired.

To receive an item

1 From standby select Menu > Settings > the Connectivity tab > Bluetooth > Visibility > Show phone.
2 When you receive an item follow the instructions that appear.

To send a camera picture using Bluetooth

1 From standby select Menu > Organizer > File manager > Camera album.
2 Scroll to a picture and select Options > Send > Via Bluetooth.

Entering text

There are two methods you can use to enter text: multitap or predictive text input.

By using predictive text input you only have to press each key once. Continue writing a word even if it appears to be wrong. The phone uses the dictionary to recognize the word when all letters are entered.

To enter text using multitap

- Press 2 – 9 until the letter appears.
- Press # to add a space.
- Press 1 to enter punctuation marks.

Multitap input only applies when Latin characters are selected as input language.

This is the Internet version of the User's guide. © Print only for private use.

To enter text using predictive text input

- For example, if you want to write the word “Land”, press 5, 2, 6, 3.
- If the word or punctuation mark is the one you want, press #⌴ to accept and add a space. To accept a word without adding a space, press ▶.
- If the word or punctuation mark is not the one you want, press ▲ or ▼ repeatedly to view alternative words.

To add a word to the dictionary

1 When you write the message, select Options > Spell word.
2 Enter the word using multitap and select Insert.

How to use the keys

- To change the input method, press and hold down *a/A.
- To shift between upper case and lower case letters, press *a/A.
- To change the writing language, press #⌴ and hold down.
- To delete characters, press C.
- To delete a whole word, press and hold down C.
- Press and hold down 0+ – 9 to enter numbers.

Chinese input

This mobile phone has different input methods for entering Chinese characters:

- Stroke input
- Pinyin input

You can use these methods, for example, to enter Chinese names and Chinese short messages.

Switching between Chinese input methods

In the Chinese editing mode, you can select and switch quickly to another input method by pressing and holding *a/A.

General instructions

Regardless of which input method you choose, your phone has a function to speed up the entry of Chinese characters. Whenever you enter a stroke or a Pinyin letter, a candidate row of the most frequently used characters containing that stroke or relating to that letter appears at the bottom of the screen.

This is the Internet version of the User's guide. © Print only for private use.

If the character you want is not displayed in the candidate row, press to present another candidate row. Continue pressing until the character you want is displayed. Alternatively, you can enter the next stroke or Pinyin letter and a new set of characters will immediately be displayed in the candidate row. To go back to the previous row, press . To select a character in the candidate row, press the navigation key or press and hold the key corresponding to the number above the character you want to enter.

Stroke input

A Chinese character is built up of strokes. There are more than 30 basic strokes, which are grouped into 5 stroke categories. Each category is represented on the keypad by one of the keys 1 – 5 . The Wild Card key 6 , is used when you are not sure of which stroke to use.

Stroke categories

The 5 stroke categories are defined in the table below:

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
1	一	一	Over	王 十 在 七 天
		丿	Lift	海 红 牡 状 习
2	丨	丨	Down	中 业 上 门 丑
		亅	Down-Hook	小 水 打 子 承
		丨	Short Slope Down	直 真 质 草
3	丿	丿	Long Left Slope	八 九 丹 风 片
		丿	Over Slope	香 千 匕 后 丢
		丿	Short left Slope	而 页 面 学 殷
4	丶	丶	Dot	六 学 雷 心 性
		乀	Right Slope	人 火 又 送 林

This is the Internet version of the User's guide. © Print only for private use.

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
			Down-Curved-Over	西四 酉 酸
5			Down-Over	山 巨 屯 母 凶
			Left Slope-Over	么 去 公 约 能
			Left Slope-Dot	女 要 好 巡 巢
			Down-Lift	衣 以 饭 收 长
			Right Slope-Hook	我 或 民 成 伐
			Down-Over-Hook	心 必 思 忘
			Down-Over-Curved-Hook	电 也 毛 兄 孔
			Down-Over-Left Slope	专 传 转
			Down-Over-Down-Hook	马 与 张 号 费
			Down-Over-Down	鼎 鼐
			Over-Hook	写 字 皮 通 免
			Over-Down	口 已 户 书 骨
			Over-Down-Hook	力 习 也 同 永
			Over-Left Slope	又 之 登 多 社
			Over-Down-Over-Left Slope	及 极 廷 建

This is the Internet version of the User's guide. © Print only for private use.

Number Key	Stroke Category	Basic Stroke	Stroke Name	Character
			Over-Left Slope-Curved-Hook	阿 队 陈 那 部
			Over-Down-Over-Hook	乃 透 鼎 隽 杨
			Over-Down-Over-Down	凸
			Curved-Hook	狗 豹 家 逐 狂
			Over-Down-Curved-Hook	乙 九 瓦 飞 风
			Over-Down-Over	投 沿 船 凹
			Over-Down-Lift	话 计 认 讯
6	? (Wild card key)			

Components

The basic building units of Chinese characters are components that are made up of strokes. After entering the first two strokes of the desired character, the component and character candidates that started with that stroke are displayed in the candidate row.
Using components is a fast method for entering complex characters.

The smaller candidates surrounded by dotted frames are components, and the bigger candidates without dotted frames are characters.

For example, to enter " 信息 "

1 Enter " ", "  " and "  ".
2 Move the cursor to " 信 ", press ⦿ .
3 Move the cursor to " 息 ", press ⦿ again to select " 息 ".

This is the Internet version of the User's guide. © Print only for private use.

Example of using the wild card key

The wild card key 6 , is used to supplement unclear strokes in entering characters. If you want to enter "互", but you only know that "一" is the first and the last stroke of the character and that the total number of strokes is four, enter 1 , 6 , 6 , 1 . The character is displayed in the candidate row.

Pinyin input

Press the keys containing the required Pinyin letters, and the phone will make various proposals on the screen, according to the pronunciation rules of Mandarin.

Below is the key mapping of Pinyin letters on the keypad.

Number Key	Pinyin Letter
2	a b c
3	d e f
4	g h i
5	j k l
6	m n o
7	p q r s
8	t u ü
9	w x y z

On the keypad, the letter ü is replaced by v.

For example, to enter " 信息 "

1 Press 9 , 4 , 6 .

2 When "xin" is highlighted, press ◀ or ▶ and select " 信 ", then press ● .(If you want to enter any of the other suggested Pinyin combinations, scroll up or down to the desired combination, then press ●).

3 Press ● again to select " 息 ", when " 息 " is highlighted.

This is the Internet version of the User's guide. © Print only for private use.

Input punctuation, symbols and smilies

Under any Chinese input mode, press *a/A, to see the table of punctuation marks, symbols and smilies. Use the navigation key to make a selection. Press #␣♫ to enter a space into the text.

Alarms

You can set a sound or the radio as an alarm signal. The alarm sounds even if the phone is turned off.

To set the alarm

1 From standby select Menu > Organizer > Alarm.
2 Scroll to an alarm and select Edit.
3 Scroll to Time: and select Edit.
4 Enter a time and select OK > Save.

To set the alarm signal

1 From standby select Menu > Organizer > Alarms.
2 Scroll to an alarm and select Edit.
3 Scroll to the ♫ tab.
4 Scroll to Alarm signal: and select Edit.
5 Find and select an alarm signal. Select Save.

To silence the alarm

- When the alarm sounds, press any key.
- To repeat the alarm, select Snooze.

To turn off the alarm

- When the alarm sounds, select Turn off.

Emergency calls

Your phone supports international emergency numbers, for example, 112 and 911. These numbers can normally be used to make emergency calls in any country/region, with or without the SIM card inserted, if a GSM network is within range.

This is the Internet version of the User's guide. © Print only for private use.

To make an emergency call

- From standby enter 112 (the international emergency number) and press  .

To view your local emergency numbers

- From standby select Menu > Contacts.
- Scroll to New contact > Options > Special numbers > Emergency nos.

Ringtones and themes

Themes are used to change the appearance of the screen.

To select a ringtone

- From standby select Menu > Settings > the Sounds & alerts tab > Ringtone and select a ringtone.

To set the vibrating alert

- From standby select Menu > Settings > the Sounds & alerts tab > Vibrating alert and select an option.

To select a key sound

- From standby select Menu > Settings > the Sounds & alerts tab > Key sound and select an option.

To select a theme

- From standby select Menu > Settings > the Display tab > Themes and select a theme.

To use a picture taken with camera as wallpaper

1. From standby select Menu > Organizer > File manager > Camera album.
2. Scroll to a picture and select Options > Use as > Wallpaper.

To use recorded radio clip as ringtone

- From standby select Menu > Organizer > File manager > Music > My radio recs.

This is the Internet version of the User's guide. © Print only for private use.

Locks

SIM card lock

The SIM card lock protects your subscription, but not your phone itself, from unauthorized use. If you change SIM cards, the phone still works with the new SIM card. Most SIM cards are locked at the time of purchase. If the SIM card lock is on, you have to enter a PIN (Personal Identity Number) every time you turn on your phone. If you enter your PIN incorrectly three times in a row, the SIM card is blocked. This is indicated by the message PIN blocked. To unblock, enter your PUK code provided by your network operator. To unblock it, enter your PUK (Personal Unblocking Key). Your PIN and PUK are supplied by your network operator.

! *If the message* Wrong code. Attempts remaining: *appears when you edit your PIN, you entered the PIN or PIN2 incorrectly.*

To unblock your SIM card

1 When PIN blocked. To unblock, enter your PUK code provided by your network operator. is displayed, enter your PUK and select OK.
2 Enter a new PIN and select OK.
3 Re-enter the new PIN to confirm and select OK.

To turn the SIM card lock on

1 From standby select Menu > Settings > the General tab > Security > Locks > SIM protection > Protection > On.
2 Enter your PIN and select OK.

To edit your PIN

1 From standby select Menu > Settings > the General tab > Security > Locks > SIM protection > Change PIN.
2 Enter your PIN and select OK.
3 Enter a new PIN and select OK.
4 Re-enter the new PIN to confirm and select OK.

This is the Internet version of the User's guide. © Print only for private use.

To edit your PIN2

1 From standby select Menu > Settings > the General tab > Security > Locks > SIM protection > Change PIN2.
2 Enter your PIN2 and select OK.
3 Enter a new PIN2 and select OK.
4 Re-enter the new PIN2 to confirm and select OK.

Phone lock

The phone lock protects the phone against unauthorized use if it is stolen and the SIM card is exchanged. You can change the phone lock code (which is 0000 by default) to any four-digit personal code. If the phone lock is set to Automatic, you do not need to enter your phone lock code until a different SIM card is inserted in the phone.

To turn on the phone lock

1 From standby select Menu > Settings > the General tab > Security > Locks > Phone protection > Protection > On.
2 Enter the phone lock code and select OK.

To edit your phone lock code

1 From standby select Menu > Settings > the General tab > Security > Locks > Phone protection > Change code.
2 Enter the current code and select OK.
3 Enter a new code and select OK.
4 Re-enter the new code to confirm and select OK.

! *If you forget your new code, you have to take your phone to your local Sony Ericsson retailer.*

To unlock the phone

1 From standby select Menu > Settings > the General tab > Security > Locks > Phone protection > Protection > Off.
2 Enter your phone lock code and select OK.

This is the Internet version of the User's guide. © Print only for private use.

Troubleshooting

Some problems require that you call your service provider, but you can correct most problems yourself. Remove the SIM card before handing your phone in for repair.

Go to www.sonyericsson.com/support for more information.

Memory capacity and speed

If you have not restarted the phone for a while, you may experience problems with its memory capacity and speed. You can restart the phone to improve its capacity.

1 Turn the phone off and remove the battery cover.
2 Remove the phone battery and then put it back in place.
3 Replace the battery cover and turn the phone on.

Master reset

If you experience problems with your phone such as screen flickering or freezing and navigation problems you should reset the phone.

- From standby select **Menu** > **Settings** > the **General** tab > **Master reset** > **Reset settings** and select an option.

Reset settings *will reset all changes that you have made in your phone to default.*
Reset all *will delete all user data as contacts, messages, pictures and sounds in your phone.*

This is the Internet version of the User's guide. © Print only for private use.

I cannot turn the phone on, what should I do?

Try charging the phone until it has finished charging. Attach the charger (make sure the power icon on the charger is facing upwards) and charge the phone for 2.5 hours. The battery icon on the screen may not appear until the phone has charged for 30 minutes.

What is my phone lock code?

A phone lock protects your phone against unauthorized use. If a different SIM card is inserted in the phone, the phone lock code has to be entered. The default phone lock code is **0000**.

What do these error messages mean?

PIN blocked

You have entered the wrong PIN code three times. Your SIM is now locked. Unlock your SIM with your PUK code, which is provided together with your PIN code by your network operator.

1. Enter your PUK code and select **OK**.
2. Enter a new PIN and select **OK**.
3. Re-enter the new PIN to confirm and select **OK**.

Insert SIM

Your SIM card is not inserted correctly or may be damaged or dirty. Try one or more of the following:

- Remove the SIM card and insert it correctly.
- Clean the connectors on the SIM card and phone with a soft brush, a cloth or a cotton bud.
- Check if the SIM card is damaged.
- Contact your network operator to get a new SIM card.

This is the Internet version of the User's guide. © Print only for private use.

Declaration of conformity for R306c

We, **Sony Ericsson Mobile Communications AB** ofNya Vattentornet
SE-221 88 Lund, Sweden
declare under our sole responsibility that our product
Sony Ericsson type AAB-1022161-BV
and in combination with our accessories, to which this declaration relates is in conformity with the appropriate standards EN 301 511:V9.0.2, EN 300 328:V1.7.1, EN 301 489-7:V1.3.1, EN 301 489-17:V1.2.1 and EN 60950-1:2006, following the provisions of, Radio Equipment and Telecommunication Terminal Equipment Directive 1999/5/EC.

Lund, March 2008



Shoji Nemoto, Head of Product Business Group GSM/UMTS
We fulfil the requirements of the R&TTE Directive (1999/5/EC).

CE 0682

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following conditions:
(1) This device may not cause harmful interference, and
(2) This device must accept any interference received, including interference that may cause undesired operation. Any change or modification not expressly approved by Sony Ericsson may void the user's authority to operate the equipment.
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications.
However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

This is the Internet version of the User's guide. © Print only for private use.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Industry Canada Statement

This device complies with RSS-210 of Industry Canada. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.
This Class B digital apparatus complies with Canadian ICES-003.
Cet appareil numérique de la classe B est conforme à la norme NMB-003 du Canada.

Sony Ericsson R306c
GSM 900/1800/1900
This User guide is published by Sony Ericsson Mobile Communications AB or its local affiliated company, without any warranty. Improvements and changes to this User guide necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Sony Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this User guide.
All rights reserved.
© Sony Ericsson Mobile Communications AB, 2008
Publication number: 1211-5522.1
Please note: Some of the services in this User guide are not supported by all networks. This also applies to the GSM International Emergency Number 112. Please contact your network operator or service provider if you are in doubt whether you can use a particular service or not. Please read the *Important information* before you use your mobile phone.
All illustrations are for illustration only and may not accurately depict the actual phone.
Your mobile phone has the capability to download, store and forward additional content, e.g. ringtones. The use of such content may be restricted or prohibited by rights of third parties, including but not limited to restriction under applicable copyright laws. You, and not Sony Ericsson, are entirely responsible for additional content that you download to or forward from your mobile phone. Prior to your use of any additional content, please verify that your intended use is properly licensed or is otherwise authorized. Sony Ericsson does not guarantee the accuracy, integrity or quality of any additional content or any other third party content. Under no circumstances will Sony Ericsson be liable in any way for your improper use of additional content or other third party content.

This is the Internet version of the User's guide. © Print only for private use.

Sony is a trademark or registered trademark of Sony Corporation. Ericsson is a trademark or registered trademark of Telefonaktiebolaget LM Ericsson. The Predictive Text Technology is used under license from Zi Corporation. The Bluetooth word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by Sony Ericsson is under license. The Liquid Identity logo and TrackID are trademarks or registered trademarks of Sony Ericsson Mobile Communications AB. TrackID™ music is powered by Gracenote Mobile. This product is protected by certain intellectual property rights of Microsoft. Use or distribution of such technology outside of this product is prohibited without a license from Microsoft. Java™ and all Java-based trademarks and logos are trademarks or registered trademarks of Sun Microsystems, Inc. in the United States and other countries/regions.
1. Restrictions: Software is confidential copyrighted information of Sun and title to all copies is retained by Sun and/or its licensors. Customer shall not modify, decompile, disassemble, decrypt, extract, or otherwise reverse engineer Software. Software may not be leased, assigned, or sublicensed, in whole or in part.
2. Export Regulations: Software, including technical data, is subject to U.S. export control laws, including the U.S. Export Administration Act and its associated regulations, and may be subject to export or import regulations in other countries/regions. Customer agrees to comply strictly with all such regulations and acknowledges that it has the responsibility to obtain licenses to export, reexport, or import Software. Software may not be downloaded, or otherwise exported or re-exported (i) into, or to a national or resident of, Cuba, Iraq, Iran, North Korea, Libya, Sudan, Syria (as such listing may be revised from time to time) or any country/region to which the U.S. has embargoed goods; or (ii) to anyone on the U.S. Treasury Department's list of Specially Designated Nations or the U.S. Commerce Department's Table of Denial Orders. Restricted Rights: Use, duplication or disclosure by the United States government is subject to the restrictions as set forth in the Rights in Technical Data and Computer Software Clauses in DFARS 252.227-7013(c) (1) (ii) and FAR 52.227-19(c) (2) as applicable. All other trademarks and copyrights are the property of their respective owners. Any rights not expressly granted herein are reserved.
Note: Sony Ericsson advises users to backup their personal data information. All illustrations are for illustration only and may not accurately depict the actual phone.
Some products may display a 17-digit number when you press *#06#. The first 15 digits are the IMEI number, and the last 2 digits are software update number.
Performance depends on temperatures, signal strength, usage patterns, features selected and voice or data transmissions. The stand-by time for this battery is up to 330 hours.

This is the Internet version of the User's guide. © Print only for private use.

www.sonyericsson.com/cn

Sony Ericsson

Sony Ericsson Mobile Communications AB
SE-221 88 Lund, Sweden

1211-5522.1

Printed in country/region

This is the Internet version of the User's guide. © Print only for private use.